

BTR configuration settings

Download Start

Transmission: ^027^097^098^027^001^000^000^000^000^000^000^000^000^000^000^000^000

Download End

Transmission: ^000^000^000^000^000^000^000^000^000^000^000^000^027^097^098^027^006

BTR Upload Start

command: ^027^097^098^027^009^000^000^000^000^000^000^000^000^000^000^000^000

BTR Upload End

Command: ^000^000^000^000^000^000^000^000^000^000^000^000^027^097^098^027^026

You must have Moxa unit using Xon/Xoff Flow Control, with Default State set to Xon!!