



Editing paths for DNC Pro

1. Changing the upload and download paths – Complete from any PC with DNC Pro installed.
 - a. Log in to Configurator app with an account with admin privileges
 - b. Under Hub tab > Ports tab, select a machine and hit Edit
 - c. On the Directories tab, change the path if the directory has changed
 - i. For upload, just edit the name
 - ii. For download, copy and paste the path in the lower text box, and hit add download dir. Path will appear in the upper text box. Finally, highlight the old path and hit delete.
 - iii. Click save and repeat for all machines

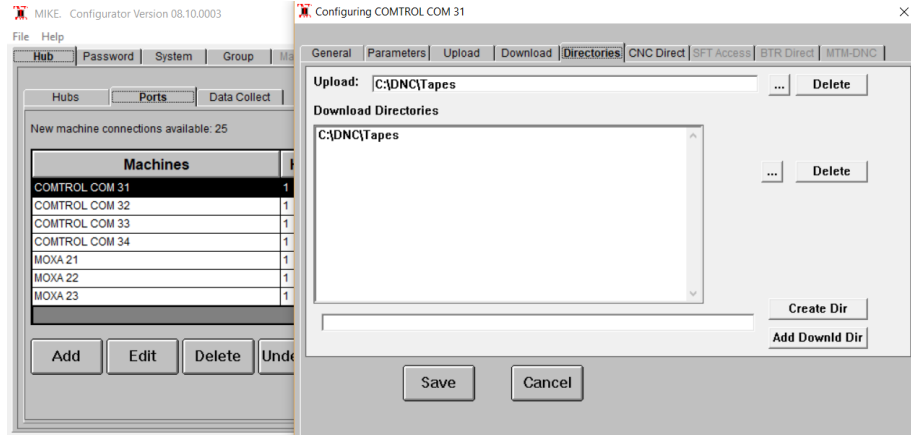

- d.
 - e. If a network drive letter is used, just remap the drive to the new location using the same letter.
2. For each PC with DNC installed, edit the Environmental Variables
 - a. Open the “System” app from the search box or control panel
 - i. Go to Advanced System Settings, then click “Environment Variables” in the box that opens
 - ii. Under “System Variables” of the Box that opens, edit the entries CIMCFG, DB_ROOT and DNC_ROOT. The only part that should be the server name.
 - iii. If network drives are used, just remap the network drive to the new location using the same letter.

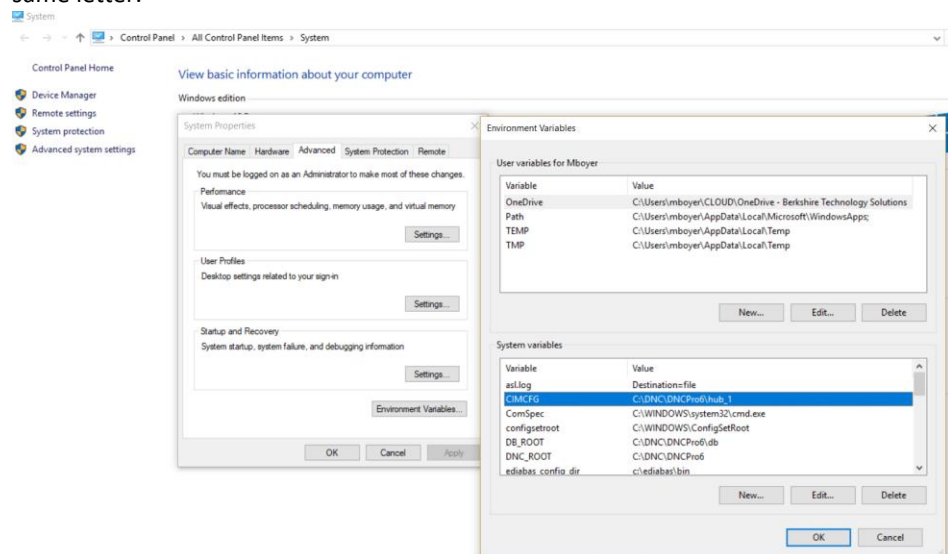

iv.